Cisco[®] 8841/8851



Your Phone

- 1. Incoming call or voicemail indicator
- 2. Phone Screen
- 3. Feature and session buttons
- 4. Softkeys
- 5 & 6. Navigation cluster, and Release
- 7, 8, 9. Hold, Conference and Transfer
- 10, 11 & 12. Speakerphone, Headset and Mute
- 13, 14 Dial Pad & Volume
- 15, 16, & 17. Contacts, Applications, Voicemail
- 18 & 19. Back & Handset



Dial Plan

Internal Calls: Dial 4-digit extension

External Calls: Domestic: 9+1 Area Code + Number

Int'l: 9+011+Country Code + Number Emergency External: 9+911 or 911

Place a Call

- Enter a number and pick up the handset.
- Press Redial softkey.
- Press New Call, Speaker or Headset and dial.

Answer a Call

Press the flashing amber session button.

Put a Call on Hold

- Press Hold.
- To resume a held call, press **Hold** again or **Resume** softkey.

Feature and Session Buttons

Feature buttons (left side): view calls on a line or Speed Dials Session buttons (right side): resuming calls or answering a call

- Green, steady: Active call
- Green, flashing: Held call
- Amber, steady: Private line in use
- Amber, flashing: Incoming call
- Red, steady: Remote line in use
- Red, flashing: Remote line on hold

Call Transfer

To transfer while on an active call:

- Press the Transfer button or softkey.
- Dial the intended party.
- Announce caller when line is picked up.
- Press the Transfer button.

Note: If dialed party is not available press **End Call**, then resume original call.

Transfer to Voicemail

Press Transfer + * + 4-digit extension + Transfer.

Call Forward

To forward all incoming calls:

- Select a line and press Forward all softkey.
- Dial the number.

To forward to voicemail:

- Press the Forward ALL softkey.
- Press the Messages button.

To receive calls again:

• Press the Forward Off softkey again.

Conference

Ad Hoc Conference (MAX #6)

While on an active call:

- Press Conference button.
- Dial the intended party, then press the Call softkey.
- When call connects, press Conference button to connect the calls.
- Repeat to add additional parties.

To rejoin conference if party is not available:

- Press EndCall softkey.
- Press Resume softkey and you are connected with conference in progress.

The conference ends when all participants hang up.

View Conference Participants

- Press the Show detail soft key.
- To refresh the screen, press **Update**.

Remove Conference Participants

- Press Show Detail soft key.
- Highlight the party you wish to remove using the Navigation button.
- Press the **Remove** soft key.

Add Another Person to a Call

- From a connected call that is not on hold, press Conference.
- Press Active calls to select a held call and press Conference again to join the calls.

Decline

Sending an Active or Ringing Call to your Voicemail

To redirect an incoming, ringing call while on another call:

 Highlight the incoming call and press Decline softkey.

To redirect an incoming call while not on a call:

Press Decline softkey.

To redirect a held call:

 First resume the call and then press the Decline softkey.

Contacts

Corporate Directory

- Press Contacts button.
- Select Corporate Directory.
- Perform a search by name or extension.
- Press Submit.
- To dial, scroll to a listing and press the Select button in the Navigation pad.
- Press Select button again.
- Press Call softkey.

To Exit:

• Press the **Back** button multiple times.

Personal Directory

To access the Personal Directory:

- Press Contacts button.
- Select Personal Directory.
- Enter **User ID**: Active Directory ID.
- Enter Password: Active Directory Password.
- Press Submit.
- Select Log Out, Select and OK.

Add a Personal Directory Entry:

- Press the Contacts button.
- Sign in to Personal Directory.
- Select Personal Address Book.
- Press the Submit softkey.
- Press the New softkey.
- Enter the nickname information.
- Press the Phones softkey and enter the phone numbers.

 Press the Submit softkey to add the entry to your personal directory.

Search for an Entry in Personal Directory:

- Press the Contacts button.
- Sign in to Personal Directory.
- Select Personal Address Book.
- Select one, all, or none of these:
- -Last Name, First Name, Nickname.
- Enter the search criteria information, then press the Submit softkey.

Call History

- Press Applications button.
- Select Recents.
- Select line to view.

Note: You can view **missed** or **all calls** by selecting the softkey.

Voicemail

Setting up Voicemail

- Press the **Messages** button
- Enter your default PIN 1234#
- Record your Name
- Record your Greeting
- Change your Temporary PIN
- Confirm PIN
- Press # to confirm Directory Listing

Note: If you hang up before completing setup, you need to repeat setup again.

Internal Sign-on

From your phone:

- Press **Messages** button.
- Enter your PIN, #.

From another phone:

- Press Messages.
- Press * key.
- Enter your 4-digit extension, PIN, #.

External Voicemail Access

- Dial your direct number.
- Press * key.
- Enter 4-digit extension #.
- Enter your PIN, #.

Main Menu:

- 1 Listen to messages
- 2 Send a message
- 3 Review old messages
- 4 Setup options

Greetings

- 4-1-1 Re-record Standard Greeting.
- 4-1-2 Re-record Alternate Greeting.
- 4-3-2 Re-record Name.
- 4-3-1 Change PIN.

Direct to Voicemail

To leave someone a voicemail message without having to call them:

■ Press * + 4-digit extension.

Check Messages

To check for messages after logging in:

- Press 1 to listen to new messages.
- Press 3, then 1 to review saved messages.
- Press 3, then 2, then 1 to listen to deleted messages.

The following options can be used while listening to your mail:

1 Restart 6 Fast Playback

2 Save 7 Rewind

3 Delete 8 Pause or Resume

4 Slow Playback 9 Fast forward-End

5 Change Volume # Skip Message ## Keep Msg. New

After listening to messages:

Replay 6 Mark As New

2 Save 7 Skip Back

3 Delete 9 Msg. Properties

4 Reply * Cancel Playing Msg

5 Forward 0 Help

Managing your phone from the Web

To manage features such as speed dials (phone buttons), abbreviated dials (softkeys), Phone Contacts:

- Access: https://172.16.20.173/ucmuser/
- Press continue to this website
- Enter your Active Directory ID and Active Directory Password.

Speed Dial Configuration

To create additional speed dials:

- Click Phones tab.
- Click Phone Settings.
- Click Speed Dial Numbers.
- Do the following:
 - If your phones are linked, click Add New Speed Dial.
 - If your phones are not linked, select the phone for which you want to add the speed dial number, and then click Add New Speed Dial.
 - 3. Enter in the Number.
 - 4. Enter in Label.
 - 5. Assign speed dial number (1-199).
 - 6. Click Save.

Call Forwarding

- Click Phones tab.
- In the left navigation pane, click Call Forwarding.
- Click the phone number on which you want to set up call forwarding.

- Check the Forward all calls to: check box.
- From the Forward calls to drop-down list box, enter the phone number to which you want to forward all calls.
- Click Save.

To turn forwarding off:

- Uncheck the "Forward all calls to" box.
- Click Save.

Do Not Disturb

- Click the IM & Availability tab.
- Check the "turn on" box under the Do Not Disturb section.
- Uncheck the box to turn DND off.

Phone Contacts

- Press Phones tab across the top of the page.
- Press Phone Settings tab.
- Click Create New Contact. The Add New Phone Contact window appears.
- Complete the fields with the contact information for the contact.
- Click OK.

Ring Settings

Customize your shared line ringtones.

- Press Phones tab across the top of the page.
- Press Phone Settings tab.
- Select Ring Settings.
- Select the phone number and customize
 When I'm on a call and When I'm not
 on a call from the drop down arrow.
- Click Save.

Voicemail Notification Settings

Customize your voicemail notification.

- Press Phones tab across the top of the page.
- Press Phone Settings tab.
- Select Voicemail Notification Settings.
- Select the phone number and customize if you want message light on, display screen prompt or play stutter tone when on a call.
- Click Save.